




JD-2 Notchmaster Reach Around Arm Installation Instructions

Install the new arm in the factory hole with the degree indicator at zero degrees. Using the new hole to the left on the Reach Around Arm as a template, mark the location of the ½” dia hole to be drilled in the tube notcher. Then install the new arm with the provided fasteners. It’s that easy.

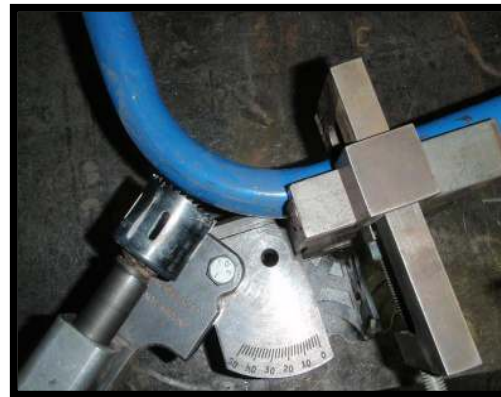

Thanks for the order, and be sure to visit Swag Off Road on [Facebook](#).

INNOVATIVE FABRICATION TOOLS & OFFROAD EQUIPMENT

Porta-band Stand Drop Down Tailgate DIY Press Brake HF Tubing Rollers Baja Bin

541-915-2775

JOIN US ON facebook WWW.SWAGOFFROAD.COM

The SWAG OFFROAD.COM logo is a shield-shaped emblem with a black background and a yellow border. The word "SWAG" is written in large, bold, yellow letters with a black outline, and "OFFROAD.COM" is written in smaller yellow letters below it.